INDEX



INDEX - Alphabetical Listing of Electrical Circuits


-Instrument Cluster Illumination


Air Conditioning/Heater	120	Lights (continued)	
Automatic Antenna	124	-License	111
Auxiliary Fan	120	-Marker	111
Charging System	106	-Park	110
	124	-Stop	108
Cigar Lighter	114	-Tail	110
Clock	201	-Turn Signal	112
Component Location		Trunk	111
Cruise Control	108	Power Distribution	102
Gauges	114		123
Ground Distribution	126	Power Windows	104
Heated Seats	125	Pre-Glow System	
Heater	120	Radio	124
Horns	122	Rear Defogger	121
		Sliding Roof	122
Lights	116	Start/Stop (Ignition Switch)	105
-Backup	117	Transmission Kickdown	116
-Center Console Illumination	118	Warning Indicators	114
—Courtesy	-	Warning System	113
—Fog Lights	107	Wiper/Washer	119
—Glove Box	116	wiper/ wasner	***
-Hazard	112		
—Headlights	107		

Component Location


114

POWER DISTRIBUTION

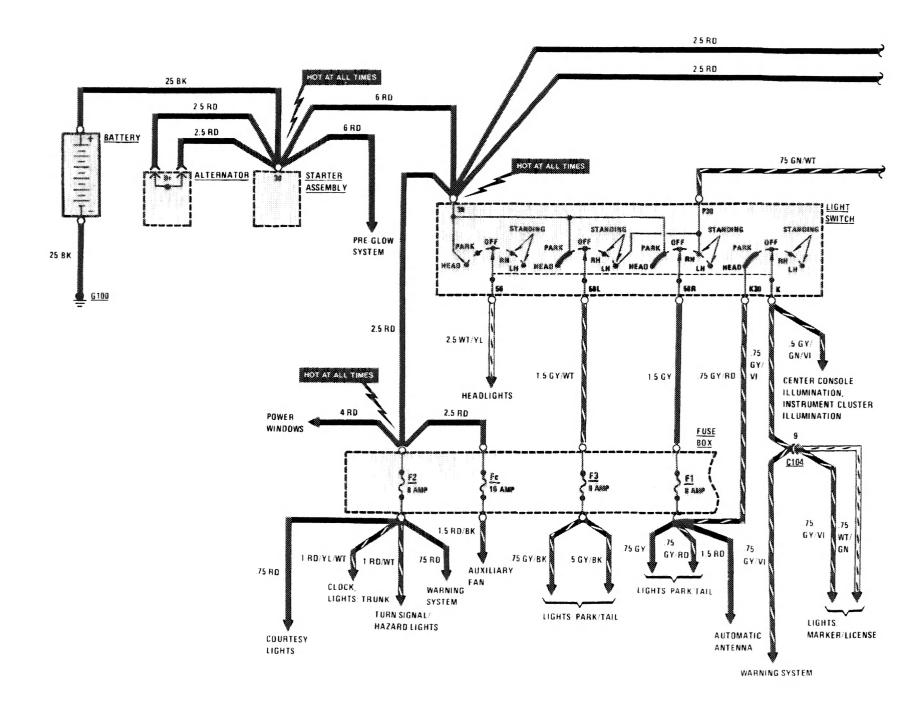


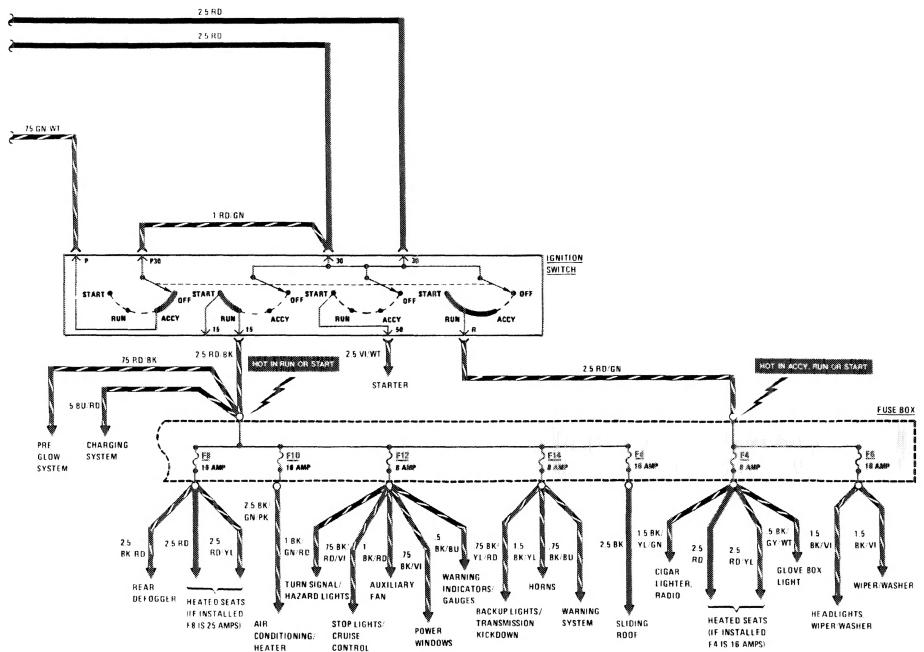


PRE-GLOW SYSTEM

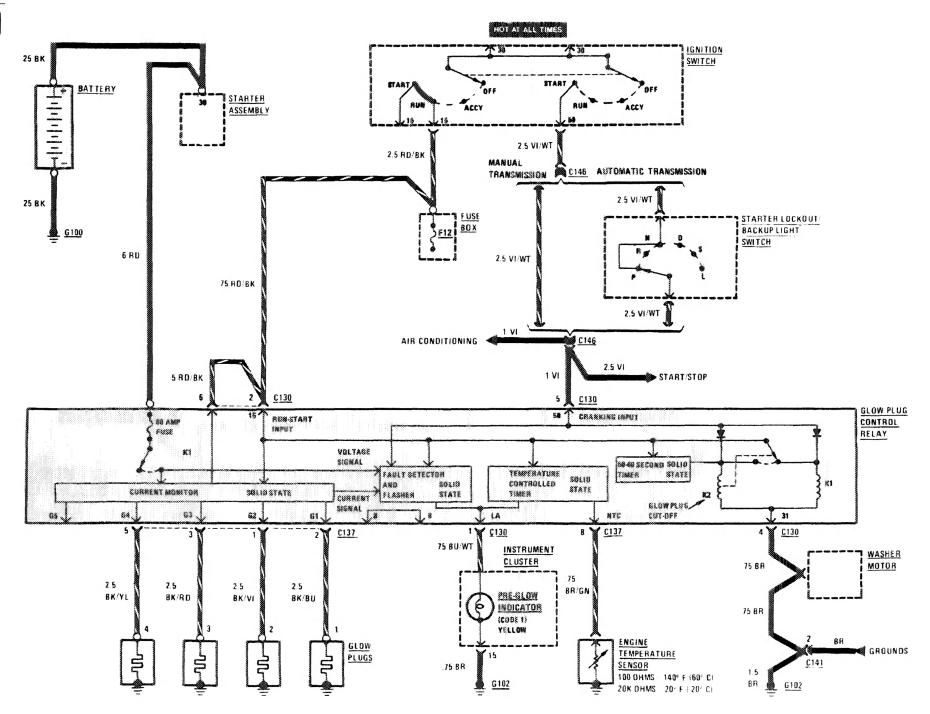


...

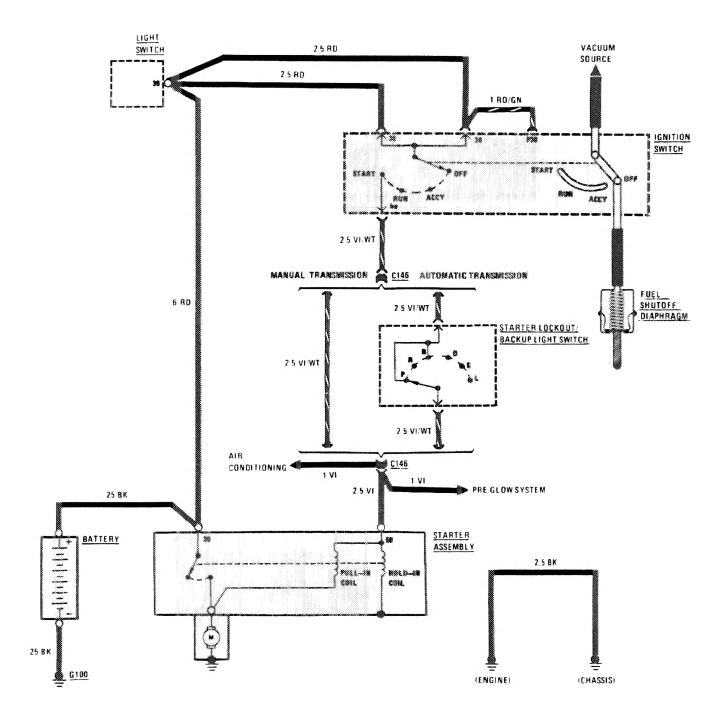


CHARGING SYSTEM

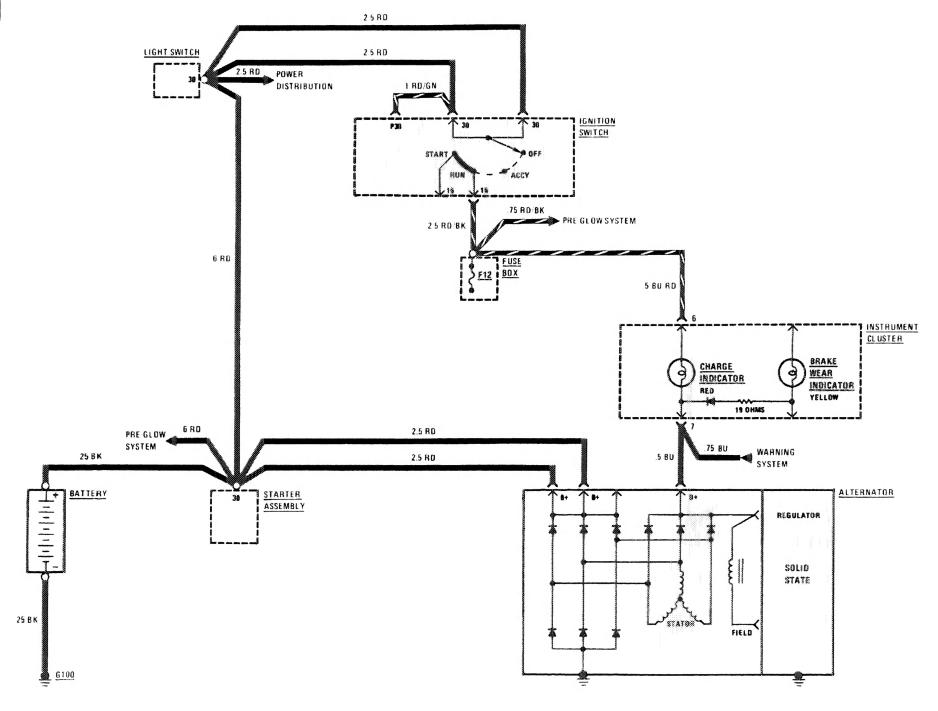


HEADLIGHTS/FOG LIGHTS

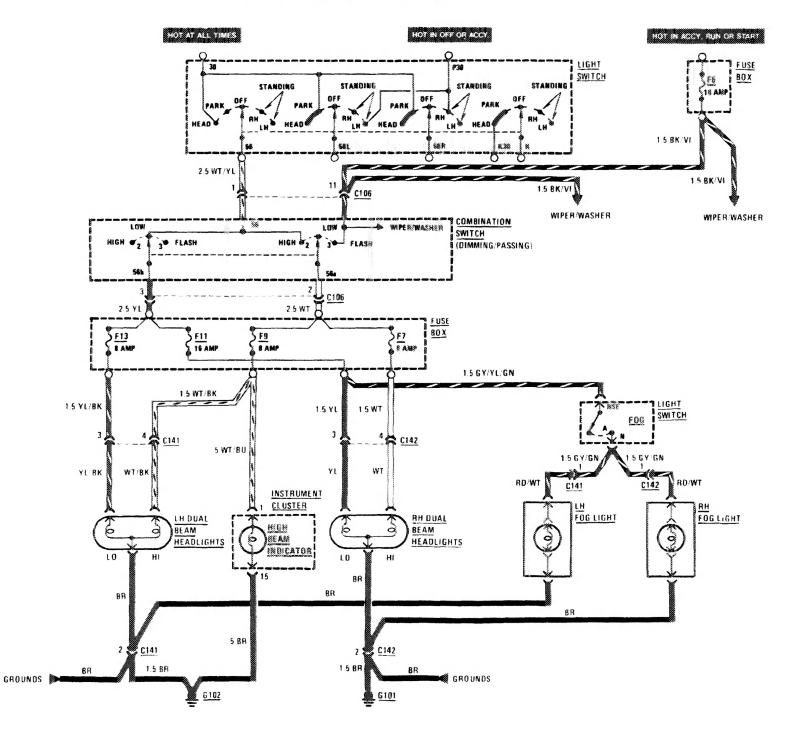



STOPLIGHTS/CRUISE CONTROL

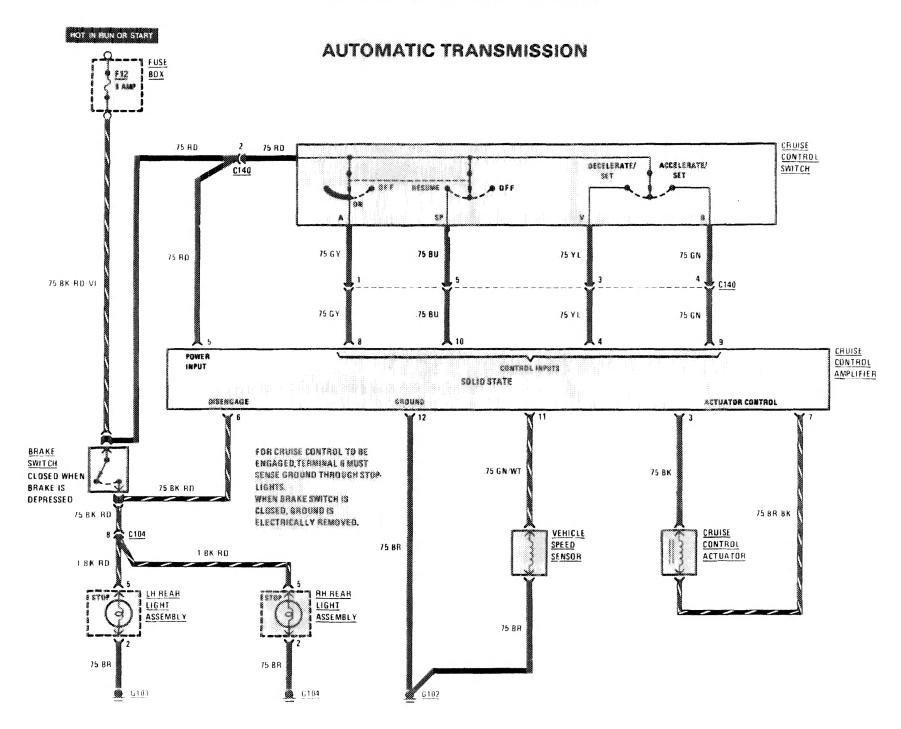

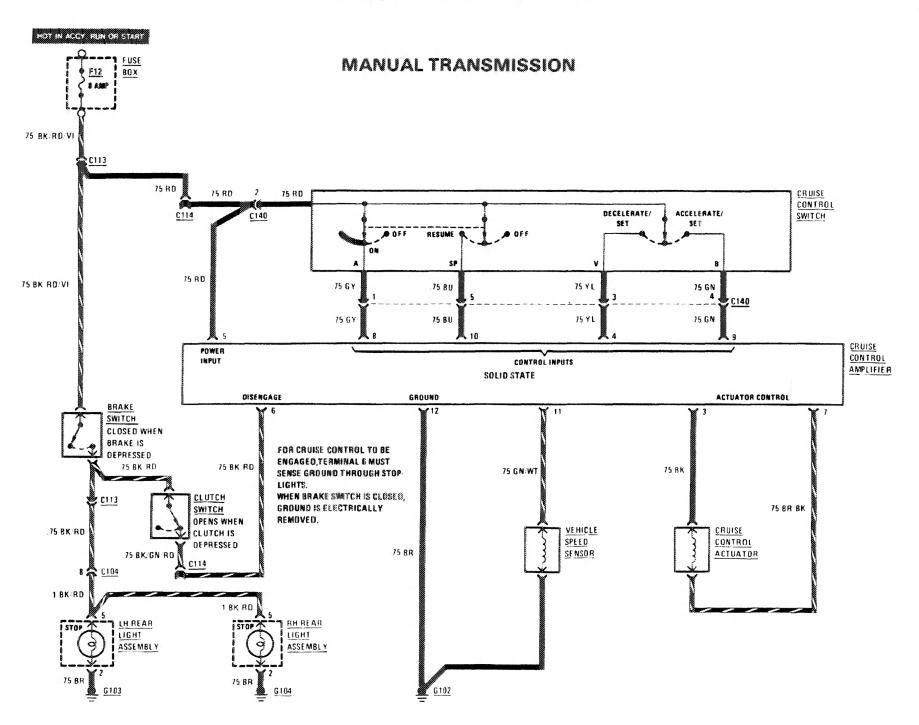


LIGHTS: PARK/TAIL

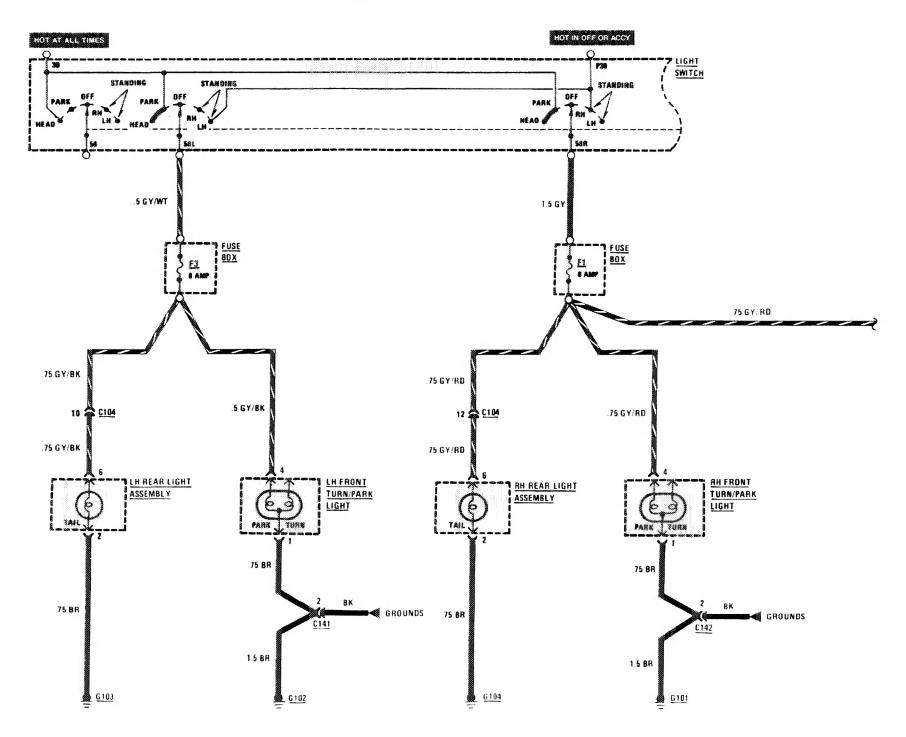


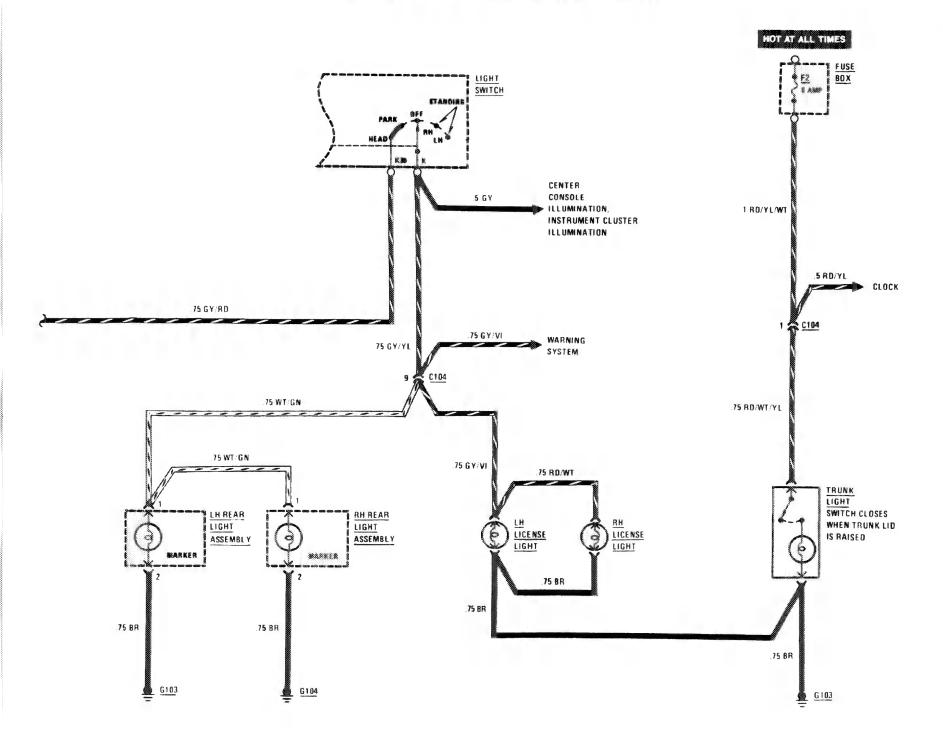


TURN SIGNAL/HAZARD LIGHTS

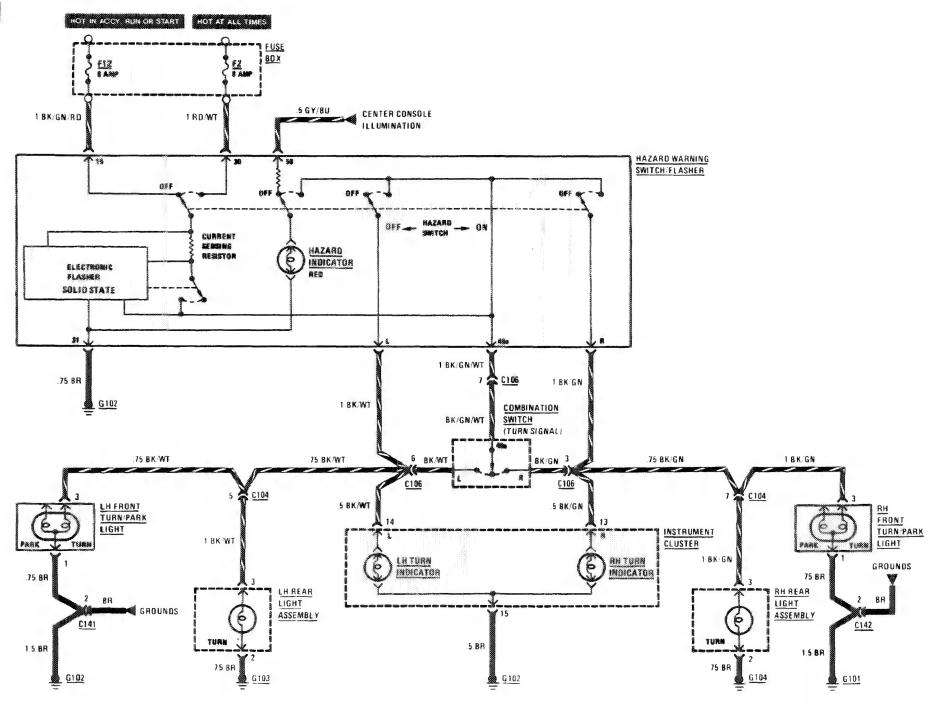


....

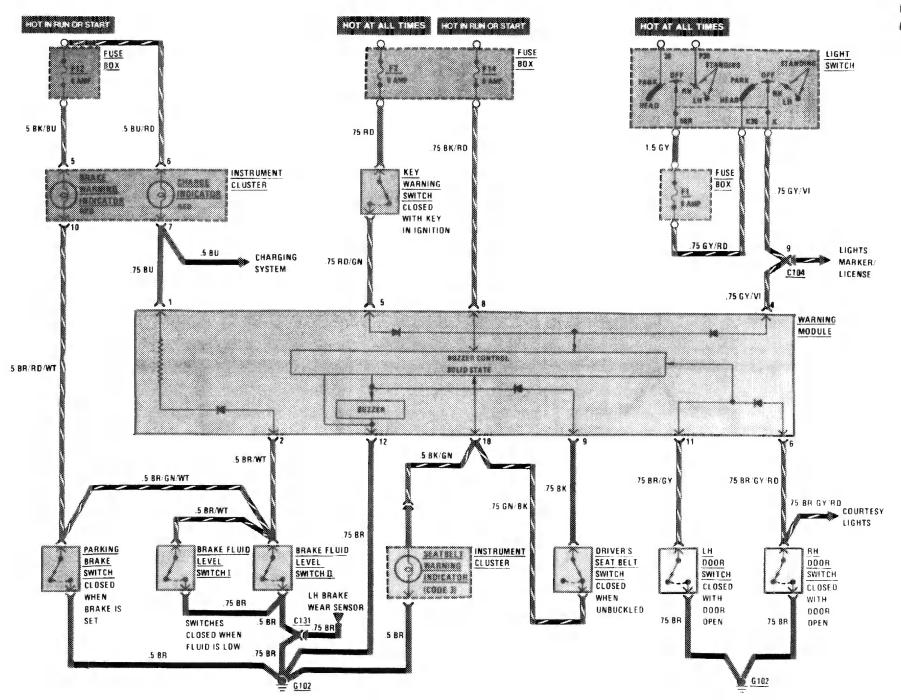


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

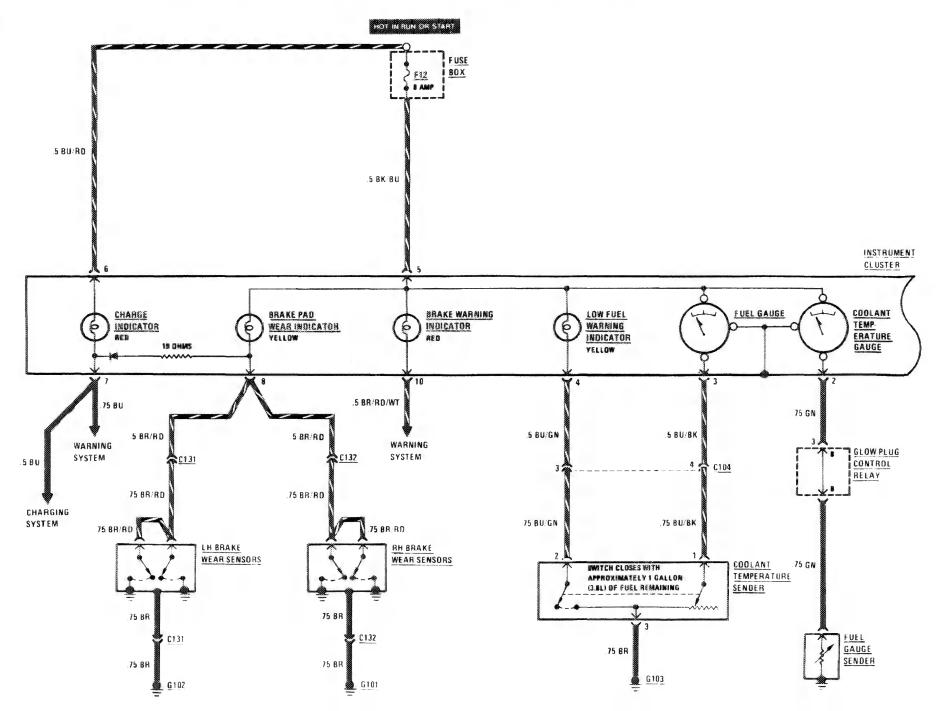


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

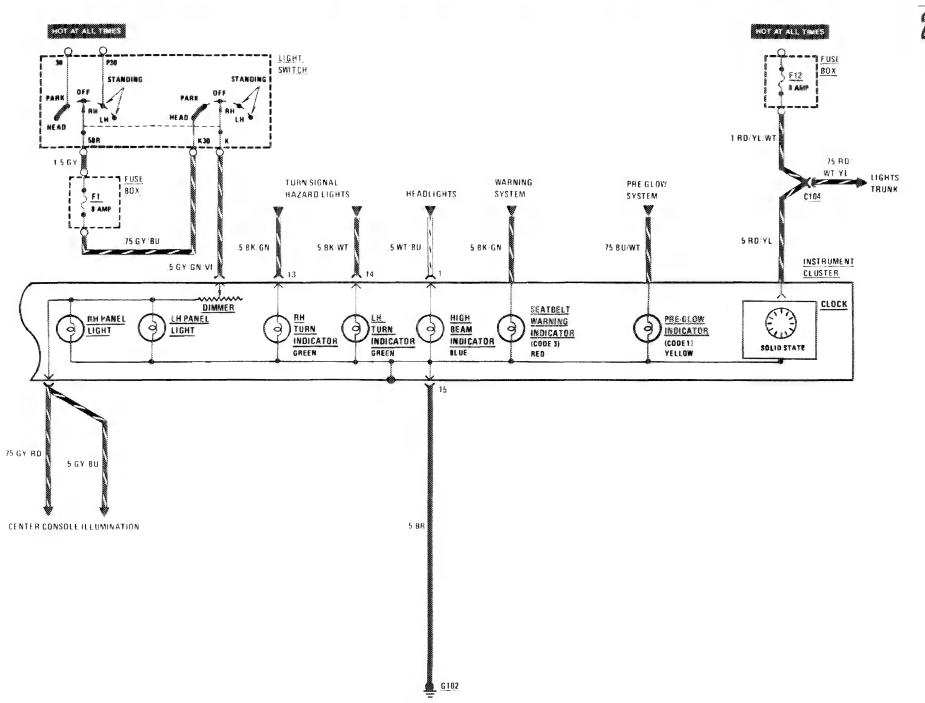



BACKUP LIGHTS / TRANSMISSION KICKDOWN / GLOVE BOX LIGHT

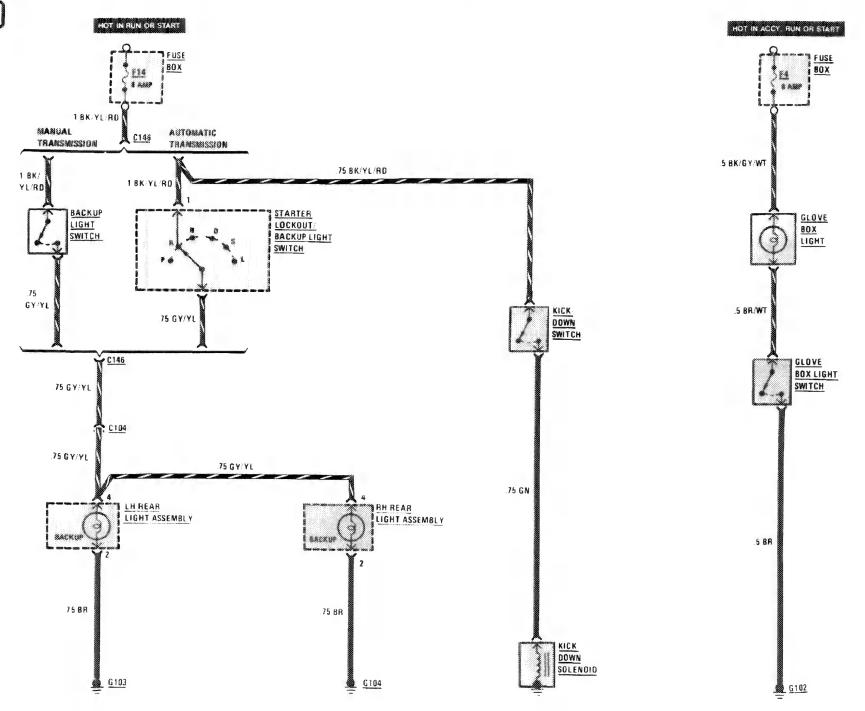

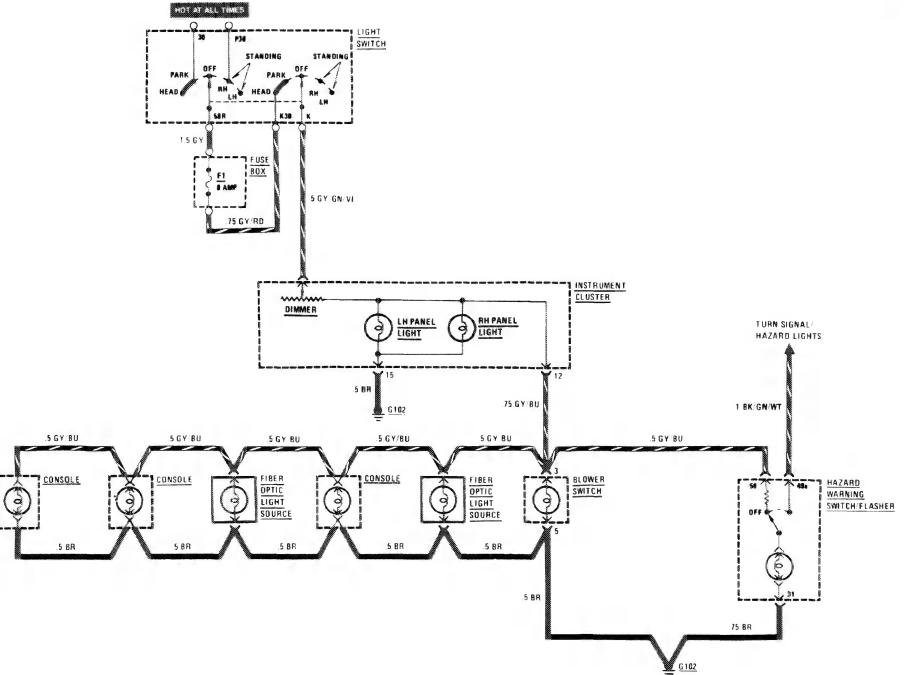



COURTESY LIGHTS

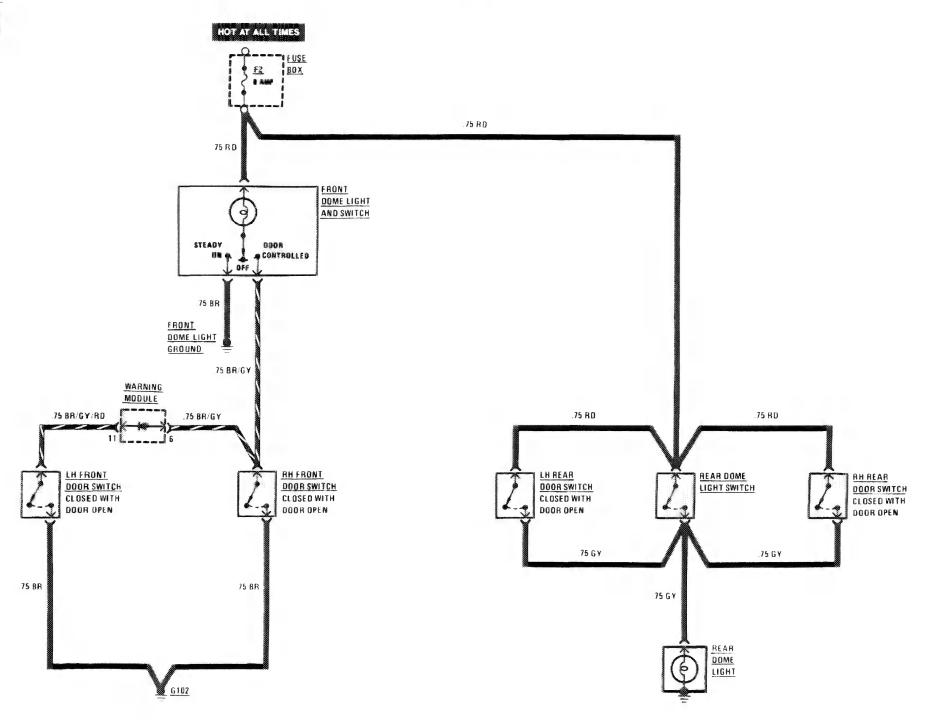

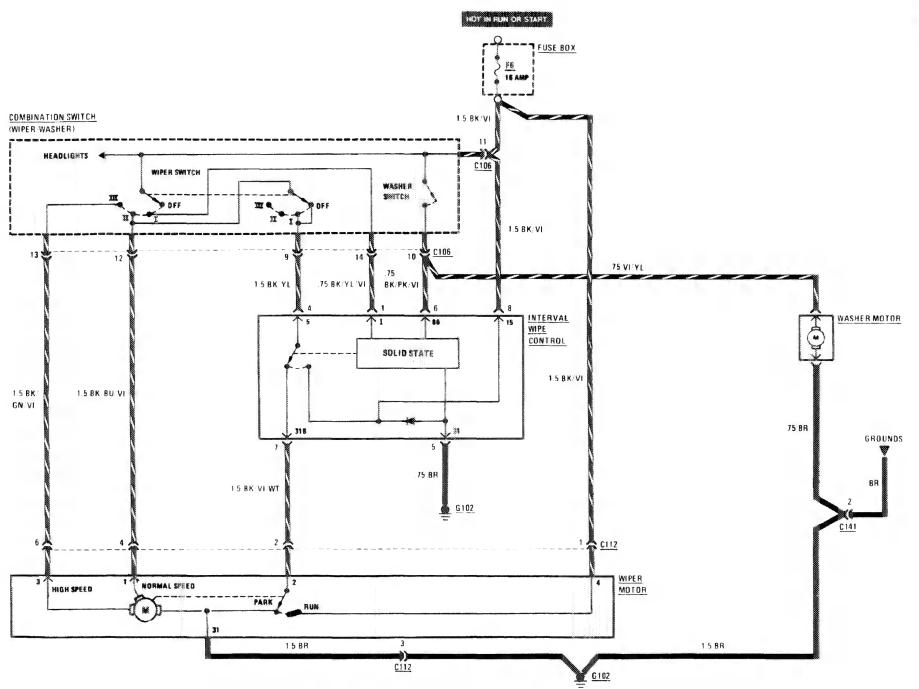


AIR CONDITIONING/HEATER/AUXILIARY FAN

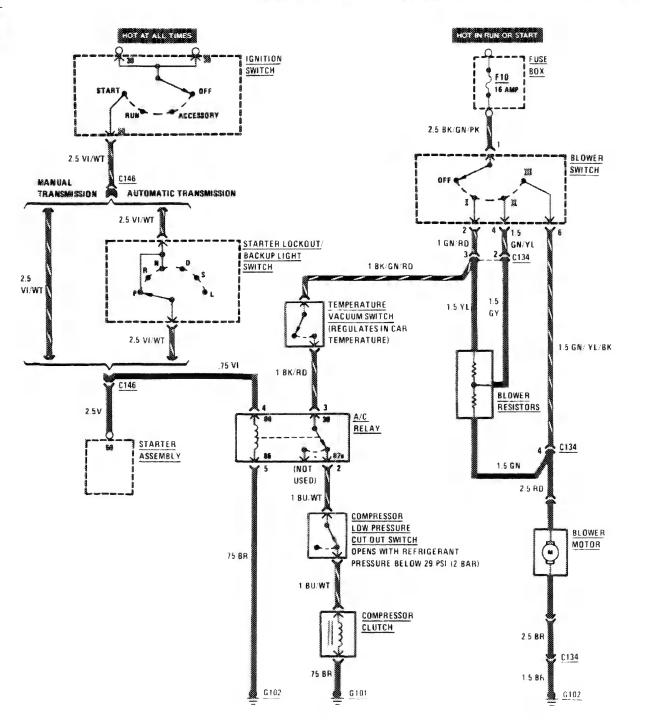


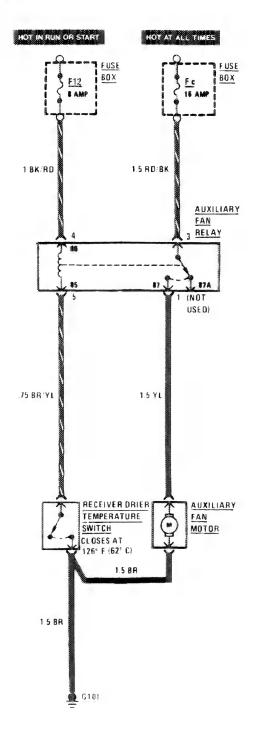



REAR DEFOGGER

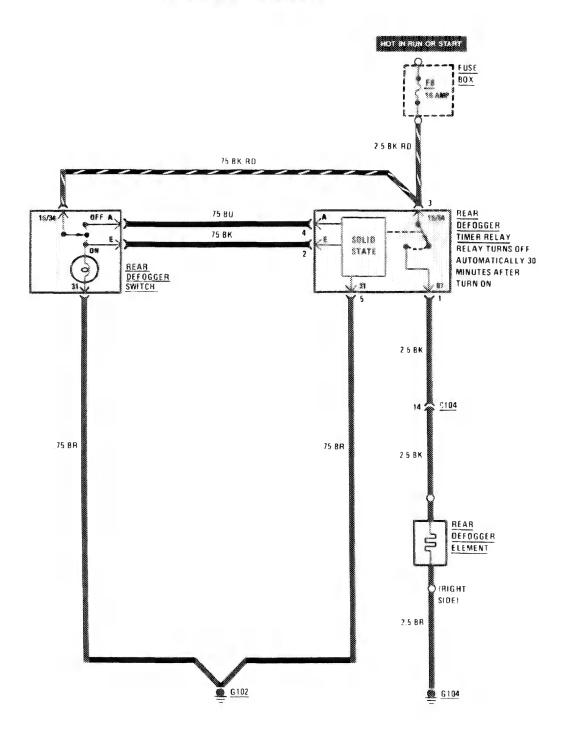


HORNS/SLIDING ROOF

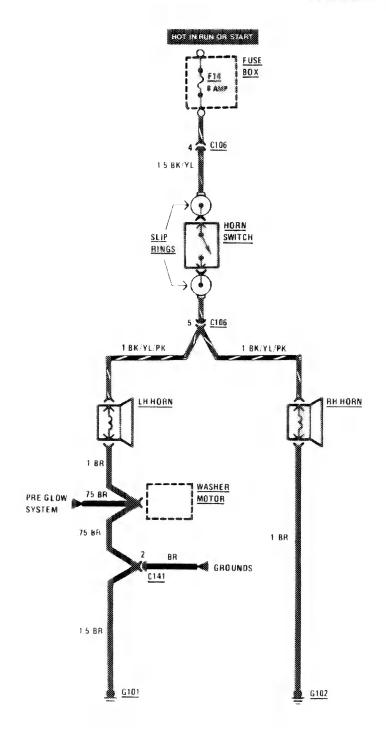


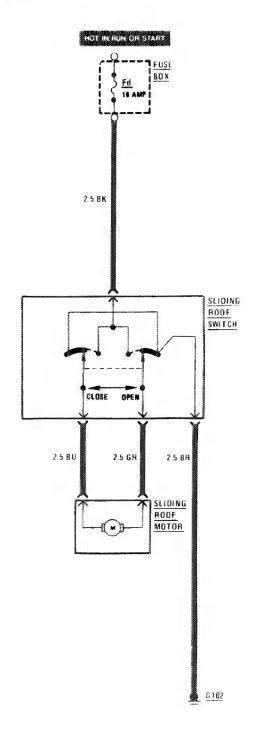

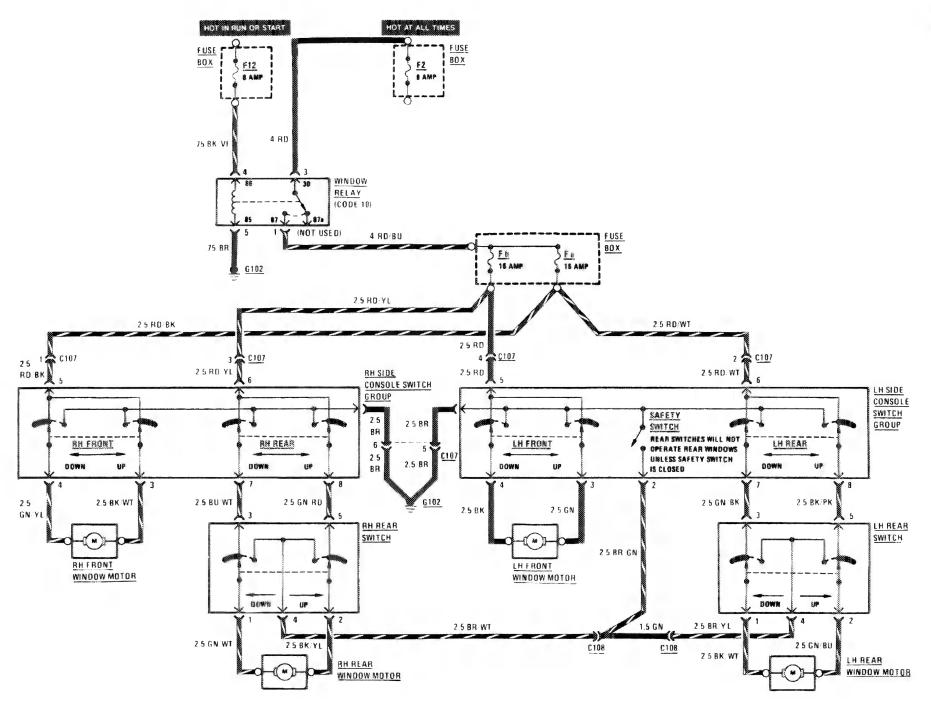



CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

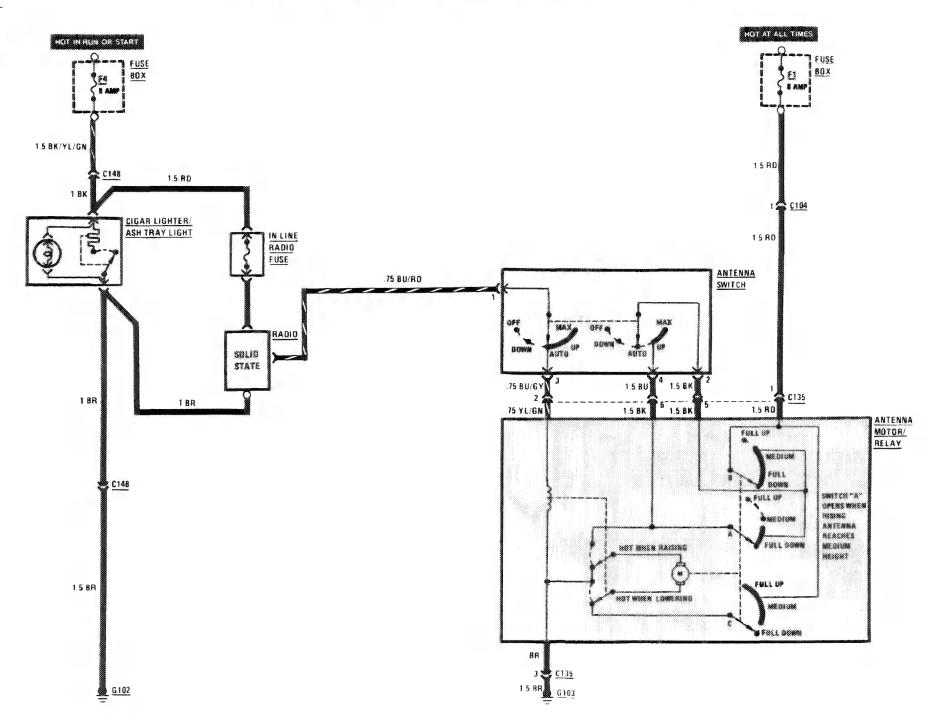


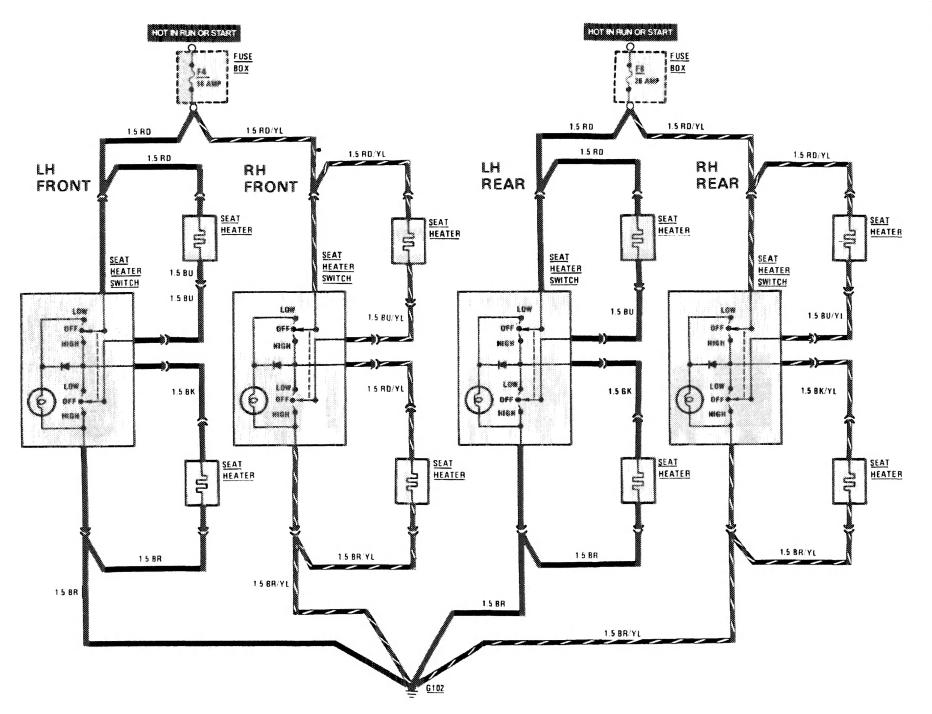

GROUND DISTRIBUTION

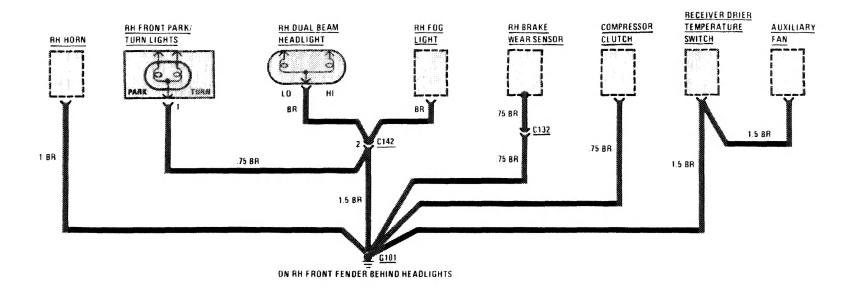

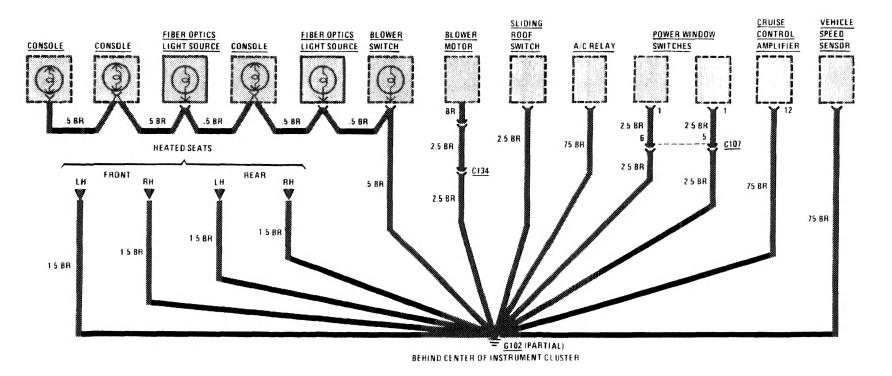

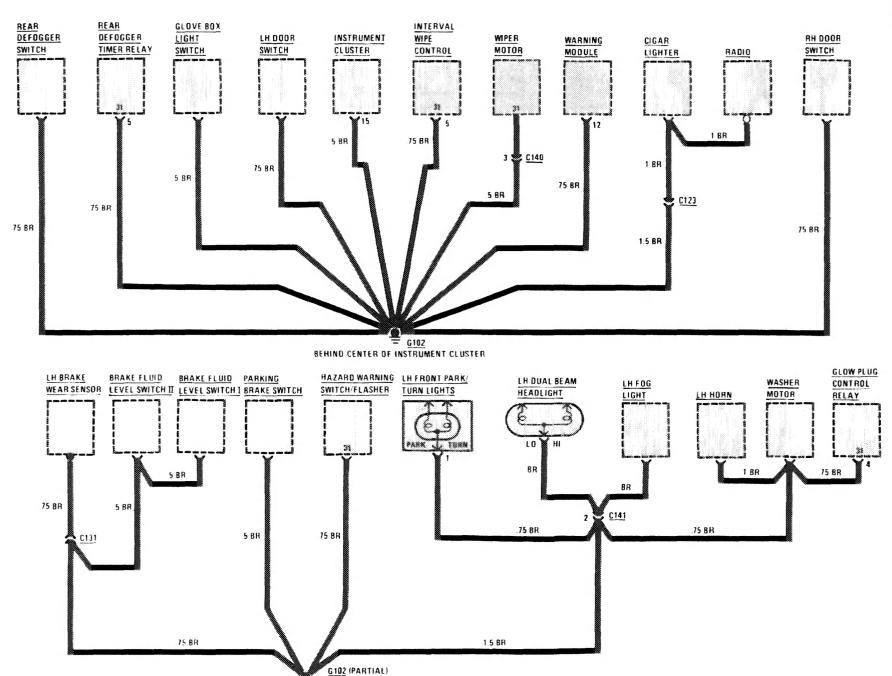

BEHIND CENTER OF INSTRUMENT CLUSTER

GROUND DISTRIBUTION

